



COTTON CANDY MACHINE

REQUIREMENTS:

- 1-6' or 8' table
- 1 - 2 Attendants
- 1 Dedicated 20 amp circuit within 25 ft and plug into outlet. The machine will not operate correctly off a generator.
- 1-16 Gauge extension cord provided by the customer.
- Adults only to operate machine.
- CC&E is not responsible for food service items not purchased directly with machine rental.
- **For pickup:** Base is 18" T x 14" L x 14" W and Dome is 18" T x 28" L x 28" W
- Please note if the machine is picked up, it can not be transported in an open area. We do not allow them unprotected in the back of a truck.

INSTRUCTIONS FOR USE:

- Fill floss in center of cylinder until almost full.
- Turn on heat and motor switches. In a few minutes, floss will start to spin out of machine. Using a clockwise motion while twisting cone in hand, floss will start to gather on cone while you keep spinning.
- Do not let machine spin with no floss in cylinder; it can damage machine
- Keep in mind cotton candy does not make well in the heat and humidity, so ideal conditions are indoors or for cooler outdoor events.

CLEANING:

- Rinse large catch bowl with water to melt sugar.
- Gently clean or wipe down outside of machine.
- DO NOT GET ANY WATER INTO MOTOR OR CYLINDER AREA. Spin out any remaining floss in cylinder.

Creative Carnivals & Events, LLS not responsible for loss or injury.