



POPCORN MACHINE WITH CART

REQUIREMENTS:

- 1 - 2 Attendants
- 1 Dedicated 20 amp circuit within 25 ft and plug into outlet. The machine will not operate correctly off a generator.
- 1-16 Gauge extension cord provided by the customer.
- Adults only to operate machine.
- CC&E is not responsible for food service items not purchased directly with machine rental.
- Machine and cart have to be delivered.

INSTRUCTIONS FOR USE:

- Place contents of popcorn "kit" into kettle.
- Turn on motor and heater switch for kettle to heat and begin popping.
- Twist kettle handle to release kettle and drop contents into bottom of popcorn machine.

CLEANING:

- Remove kernel catch tray at bottom of machine and discard.
- Wipe down inside and outside walls of machine (preferably with a grease cutting agent).
- Keep water away from the kettle area.

Creative Carnivals & Events, LLS not responsible for loss or injury.