



**WAFFLE STIX MACHINE**

**REQUIREMENTS:**

- 1 – 6' or 8' Table
- 1 – 2 Attendants
- 1 Dedicated 20 amp circuit within 25 feet and plug directly into outlet. The machine will not operate correctly off a generator.
- 1 - 16 Gauge extension cord provided by the customer.
- CC&E is not responsible for food service items not purchased directly with machine rental.

**INSTRUCTIONS FOR USE:**

- Plug the unit in and switch 'On'. Turn the 'Temperature Control Dial' to 230 degrees. The green warming indicator light will now turn on.
- When the light turns off, the unit has reached the desired temperature and is now ready for use.
- Nonstick baking spray may be used periodically during your event to lightly recoat top and bottom waffle grids if sticking occurs.
- Ladle just enough batter to fill the lower grid so that the peak areas of the grid are completely covered. (It takes approximately 1/3 cup of batter to fill each Waffle Stix grid.)
- Place a skewer in each of the four skewer guide holes on the lower waffle grid.
- Close the lid to begin cooking and set the timer. (Making 4 waffles takes about 2 minutes; Making 1-2 waffles takes about 1 ½ minutes.)
- Open the lid and gently remove the waffle stix by lifting the skewers from the outside of the machine.
- Once cooking for the day is complete, turn the machine to the 'Off' position. Once the machine has cooled down, unplug the machine.

**CLEANING:**

- Make sure the machine is unplugged.
- Using a dry cloth, remove all remaining food particles.
- DO NOT USE WATER OR ANY TYPE OF DETERGENT ON MACHINE!

**IMPORTANT SAFETY PRECAUTIONS:**

- The Waffle Stix machine may smoke a bit when first plugged in. This is NORMAL, and common to electrical appliances with a non-stick surface.
- After preheating, coat the waffle grids by spraying them with nonstick cooking spray to thoroughly coat them for cooking.
- To reduce the risk of fire or electric shock, ONLY authorized personnel should do repairs.
- DO NOT touch hot surfaces. This may result in severe burns.
- DO NOT let children operate this appliance.

Creative Carnivals & Events, LLC. Not Responsible For Loss or Injury.