



MONEY BOOTH

REQUIREMENTS:

- 1 – 2 Attendants. One at entrance to run money blower and one for prizing.
- 1 Dedicated 20 amp circuit within 100' for the two blowers. CC&E will provide a heavy gauge extension cord.
- 5L x 5W x 11.5H
- Recommended play: 1 participant - 10 seconds per turn
- CC&E does not provide money, paper, or prizes for the game.
- Recommended Participant Ages: Elementary through Adult

PLEASE...

- Do not enter inflated booth unless Operator is present.
- No horseplay inside booth.
- Recommend participants wear a blind fold or safety glasses.
- Do not let participants take money that sticks to the ceiling, side walls or floor.
- Do not let participants stuff money into clothing. They only keep what's in their hands.
- Operator can terminate play for not following rules.

OPERATOR AWARENESS:

- Wind conditions must be less than 15 mph; if wind gusts begin, deflate immediately.
- Adult Operators are required for safe use of Inflatable Games.
- Operator should remove all debris from the area prior to allowing participants on the Inflatable Game.
- Operator should watch for signs of deflation such as sagging, excessive wrinkling or distortion. If these are observed, they should ask participants to exit the Game safely and remain calm, as there is no danger.
- Operator should keep all spectators outside the Game and maintain at least a 3 foot perimeter around it.
- Operator must not allow access to the rear of the game or near the inflation blower and power supply.
- Silly string, foam or like products are not permitted in any event where Inflatable Games are being used.
- Duct tape may not be used to secure electrical cords or to post rules on games; consult CC&E for alternatives.

EMERGENCY EXITING:

- If power goes out the Attendant should: a) check that blower is plugged in; b) check to make sure blow tube is attached to blower; c) check to see if zipper is fully zipped.

Creative Carnivals & Events, LLC. Not Responsible For Loss or Injury.